


Partial cutaway of plug type duplex strainer showing basket in position



Cutaway of Y strainer shows strainer screen in position

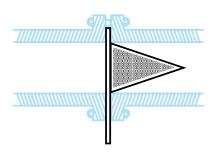

Cone type temporary strainer is shown bolted between two pipe flanges

Eaton Brazil

Eaton China

Eaton

Voice: +55 11 2465 8822

Voice: +86-21 5200 0422

Eaton Singapore

Voice: +65 6825-1668

Europe/Africa/Middle East Voice: +49-2486-809-0

Eaton North America — HQ


44 Apple Street, Tinton Falls, NJ 07724

Toll Free: 800 656-3344 (North America only)

Voice: +1 732 212-4700 Fax: 952 906-3706

Basic Sizing Guidelines

- 1. Ensure that the pipeline flow velocity falls within the standard design range of the strainer.
- 2. Select the correct screen and opening size, do not make smaller than necessary.
- 3. The quantity, type, and nature of debris to be removed are considered.
- 4. The strainer meets the design pressure and temperature requirements of the pipeline.

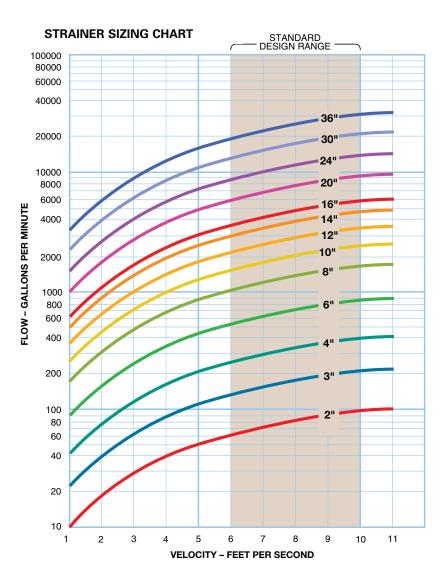

©2013 Eaton Corporation. All Rights Reserved. All trademarks and registered trademarks are the property of their respective owners. Litho USA. All information and recommendations appearing in this brochure concerning the use of products described herein are based on tests believed to be reliable. However, it is the user's responsibility to determine the suitability for his own use of such products. Since the actual use by others is beyond our control, no guarantee, expressed or implied, is made by Eaton as to the effects of such use or the results to be obtained. Eaton as absolutely complete, since additional information may be necessary or desirable when particular or exceptional conditions or circumstances exist or because of applicable laws or government regulations.

For more information, e-mail us at filtration@eaton.com

Visit us online at <u>eaton.com/filtration</u> for a complete list of Eaton's filtration products.





FAT•N

Powering Business Worldwide