

SIHI ZTND Parts List, Connections, dimensions, and sectional drawing:


10.3 Parts list

When ordering spare parts give the following information: position number, the complete pump designation and the serial number, which can be found on the nameplate fixed to the pump.

<u>Pos. Nr.</u>	<u>Description</u>	<u>Pos. Nr.</u>	<u>Description</u>
10.20	Volute casing	52.50*	Spacer
16.10	Cover	52.51*	Spacer
18.30	Support foot	54.51*	Bush
18.31	Support foot	55.00	Disc
21.00*	Shaft	55.01	Disc
23.00*	Impeller	55.02	Disc
32.10*	Grooved ball bearing	56.00	Grub screw
32.11*	Inclined ball bearing	63.60	Grease nipple
33.00	Bearing bracket	90.10	Hexagon screw
36.00	Bearing cover	90.11	Hexagon screw
40.00*	Gasket	90.12	Hexagon screw
40.01*	Gasket	90.13	Hexagon screw
41.10	Joint	90.22	Stud
41.20*	O-ring	90.30	Screw plug
41.24*	O-ring	90.31	Screw plug
42.10*	Radial shaft seal ring	90.40	Grub screw
42.13*	Radial shaft seal ring	91.40	Allen head screw
43.30*	Mechanical seal	92.00	Hexagon nut
44.10	Shaft seal casing	92.01	Hexagon nut
44.11	Shaft seal casing	92.02	Hexagon nut
47.10	Sealing cover	92.20*	Shaft nut
48.50	Locating ring	92.30*	Shaft nut
50.20	Wear ring	93.10*	Lock washer
50.60	Clamping disc	93.11*	Lock washer
		93.20*	Circlip
		94.00*	Key
		94.01*	Key

* Recommended spare parts

ZTN 032125 to 150250
SHAFT SEAL EXECUTION "002"

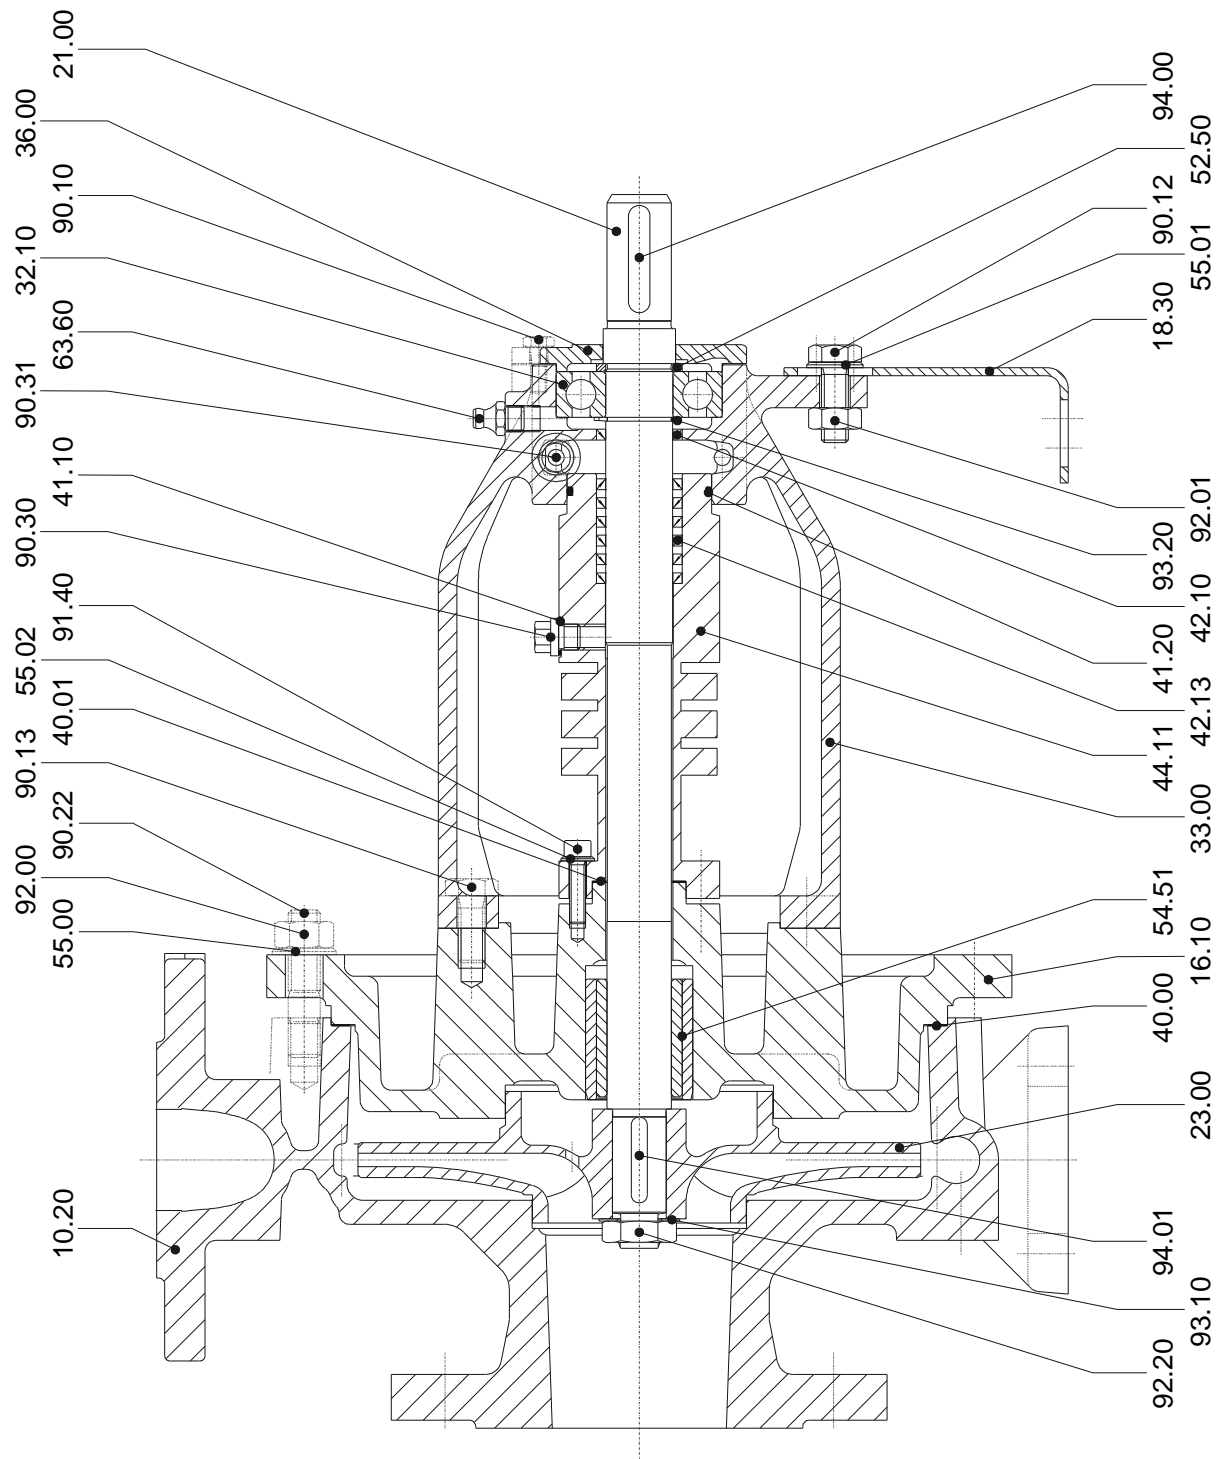

ZTN 032125 to 150250
 SHAFT SEAL EXECUTION "GBC"

